

THE SUSHI MAKER 3 HOW TO USE YOUR KIT

TRIANGLE SUSHI



Slide frame onto triangle base



Place standard size nori sheet with smooth shiny side against frame and base



Fill with rice evenly to half



Wet rod before use



Press firmly to make a groove




Place ingredients in the center



Cover with rice to the top



Fold nori and seal with water

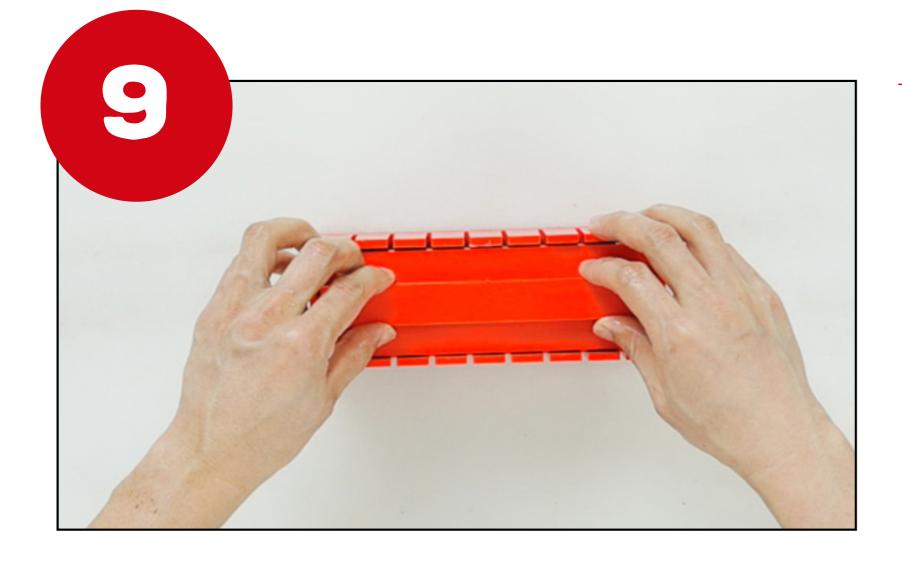

Use flat top to pack and shape roll



Press firmly down to the stops



Wet knife before cutting and cut at an angle from the side of the roll




Use top to reshape roll






Remove frame

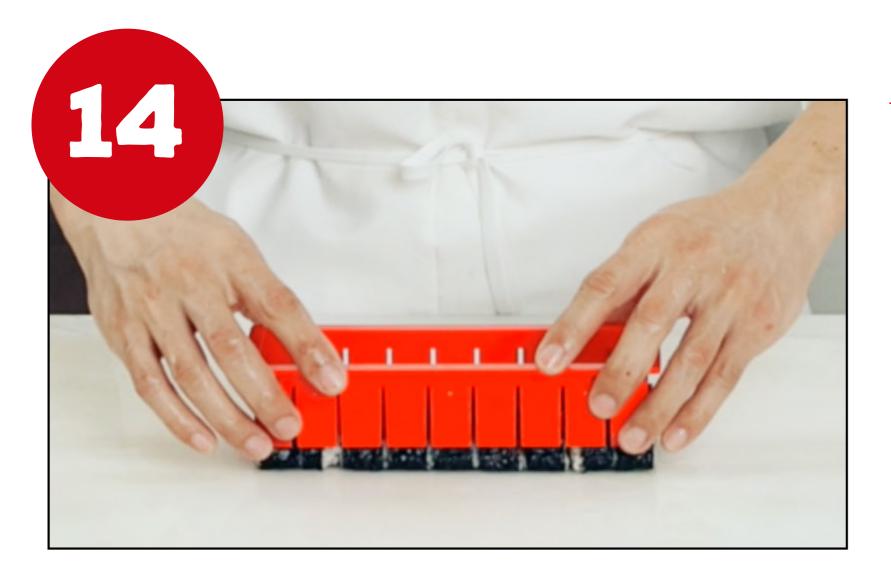

Remove roll from base

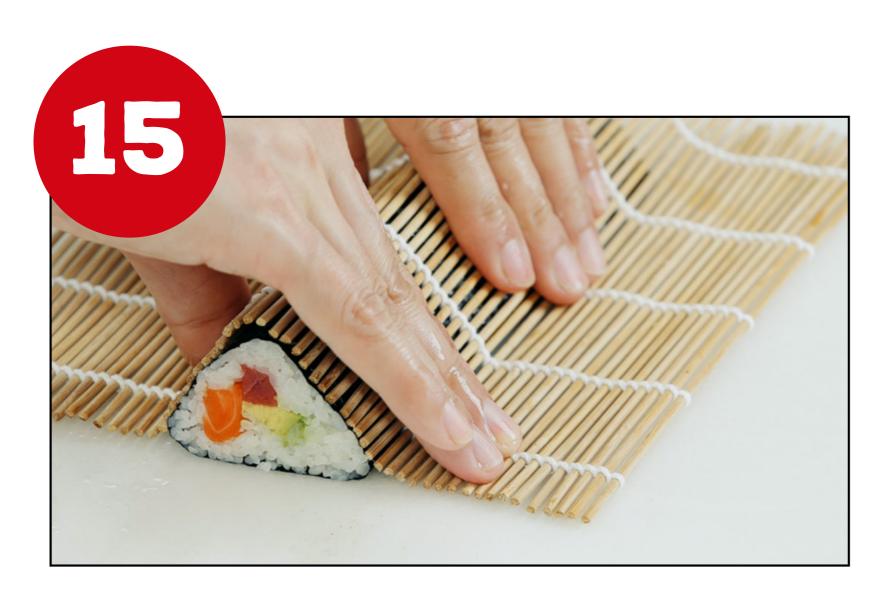

Use mat to shape roll



Plate your sushi